



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for GE SECURITY NX-148. You'll find the answers to all your questions on the GE SECURITY NX-148 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual GE SECURITY NX-148
User guide GE SECURITY NX-148
Operating instructions GE SECURITY NX-148
Instructions for use GE SECURITY NX-148
Instruction manual GE SECURITY NX-148

NX148-E LCD KEYPAD

TABLE OF CONTENTS

GLOSSARY OF TERMS	3
UNDERSTANDING THE LIGHTS	4
KEYPAD FUNCTIONS	5
ARMING YOUR SYSTEM IN THE 'AWAY' MODE	5
MAKING YOUR SYSTEM READY TO ARM	5
ARMING YOUR SYSTEM IN THE 'STAY' MODE	6
USING THE QUICK ARM	7
DISARMING YOUR SYSTEM	7
CANCEL/ABORT FEATURE	8
BYPASSING ZONES	8
GROUP BYPASS	9
UNBYPASSING	9
EMERGENCY ACTIVATION KEYS	9
FUNCTION MENU	10
VIEW ZONE STATUS	11
SETTING THE KEYPAD TONE	11
VIEW ALARM MEMORY	11
TEST FUNCTION	11
DISPLAY TEST FUNCTION	12
LIGHT CONTROL FOR X-10 DEVICES	12
CHANGE LANGUAGES	12
CHANGING USER CODES	13
ASSIGNING USER CODE AUTHORITY LEVELS	13
RESET FUNCTION	14
READING THE EVENT LOG	15
ADJUSTING THE VIEW / BRIGHTNESS OF THE LCD	15
SETTING THE SYSTEM CLOCK	16
USING THE DOOR CHIME FEATURE	16
PARTITIONED SYSTEMS OPERATION	17
LIGHTS IN PARTITIONING MASTER MODE	17
DISPLAYS IN THE PARTITIONING MASTER MODE	17
KEYPAD CONTROL TONES (BEEPS)	20
SERVICE DISPLAY	21
APPENDIX A - EVENT LOG	23
EMERGENCY EVACUATION PLANS	25



[Your user manual](#)
[GE SECURITY NX-148](#)

Manual abstract:

You may now leave the building. 6VWHP\$UPHG \$OO=RQHV6HFXUH IMPORTANT! The exit light will flash rapidly for the last 10 seconds of the exit delay as a warning to the user that the exit time is about to expire. The user may wish to disarm and rearm the system if more time is needed. MAKING YOUR SYSTEM READY TO ARM If the ready light is not on or if it is flashing, a zone is not secure. To identify this zone, use the scroll keys x y to the right of the display to browse through the zones that are not normal. If you wish to bypass or unbypass one of these zones, press the [BYPASS] key while that zone is being displayed. When finished viewing the zones, press the # key to return to the code entry screen. 5 ARMING YOUR SYSTEM IN THE "STAY" MODE STAY is utilized when the user is inside the premise and wants protection around the perimeter. The steps to arm in the STAY Mode are as follows: Step 1 Close all protected doors and windows. Ready light must be on or flashing (force armed) when all protected zones and sensors are secure.

NOTE: If any zones are bypassed, a sensor in that zone can be violated without affecting the ready light. The security system will not arm if the ready light is not on or flashing. If the power light is off, you have no AC power. Restore power if possible. If not, contact the installing company for service.

6VWHP5HDG\ 7SHFRGHWRDUP Step 2 Enter your 4 or 6 digit user code. (Optional, if programmed.) If "Auto Bypass" is enabled, all interior zones will be bypassed if you do not leave through a designated entry/exit door. If Auto Bypass is enabled, omit Step 3. When "Auto Instant" is enabled, if you do not leave through a designated entry/exit door, the display will read "Instant", indicating that the entry/exit doors no longer have an entry delay.

If "Auto Instant" is enabled, omit Step 4. Press the [STAY] key. The stay light will illuminate indicating that all interior zones are bypassed. (All interior devices will bypass automatically, giving the user freedom of movement within the interior area.) The bypass light will illuminate if any zone(s) are bypassed. If any zone (s) have been bypassed previously by the user, the light(s) corresponding to the bypassed zone(s) will illuminate, alerting the user that a zone(s) may be unprotected and can be faulted without an alarm. To toggle from a "delayed entry" mode to an "Instant" mode, press the [STAY] key again. The LCD display will read 6VWHP\$UPHG "Instant" meaning the entry/exit ,QVWDQW doors do NOT have an entry delay. Step 3 Step 4 6 USING THE QUICK ARM The Quick Arm feature may be used if it is enabled. Quick Arm will allow the user to arm the security system in the AWAY mode by pressing the [EXIT] key.

The system can be quick armed in the STAY mode by pressing the [STAY] key. This feature is used for ARMING ONLY, and will not disarm the security system. This is ideal for a maid or baby sitter code, etc. CHANGING MODES WHILE YOUR SYSTEM IS ARMED Step 1 Pressing the [STAY] key will turn on/off (toggle) a delay on Entry/Exit doors. The "Instant" message will toggle on the LCD display. (Optional, if programmed.) Press the [BYPASS] key at this time to turn on/off (toggle) all designated interior zones. If all interior zones are not bypassed, the stay light will extinguish. (Optional, if programmed.) When armed, pressing the [EXIT] key will start the Exit delay, enabling you to leave the building.

Step 2 Step 3 IMPORTANT! An alarm will be created if the "Instant" message is ON at this time and you reenter the building. You may re-initiate an entry/exit delay by pressing the [STAY] key again. The "Instant" message will disappear. DISARMING YOUR SYSTEM When you enter the protected area through one of the designated Entry/Exit doors, the keypad control will sound a continuous tone for the duration of the entry delay time, or until you enter a valid code. Step 1 Step 2 Enter a valid user code.

The red armed light will go off and the tone will stop. The security system is now DISARMED. If a valid code is not entered before the end of the entry delay, an alarm will occur. NOTE: If the red armed light is flashing during the entry delay, the alarm system has been activated in your absence. Leave the building immediately and call your alarm company and/or the police from a safe location.



[Your user manual](#)
[GE SECURITY NX-148](#)